

coway

juicepresso

CJP-03
User's Manual



Enjoy the pure nature flavour with **juice**presso

Squeeze nature, taste **juice**presso

With its newly developed patent technology, **juice**presso extracts juice while retaining the original nutrients and enzymes in fruits and vegetables, letting you enjoy the full taste and health benefits in juice.

For your safety and proper use of the **juice**presso , please read this User's Manual before use.

Contents

2^{page}
Safety Precautions

4^{page}
Product Components

6^{page}
Preparations before use

7^{page}
Assembly instruction

8^{page}
How to use **juice**presso

9^{page}
Helpful Tips for your
juicepresso

10^{page}
How to disassemble
and clean

11^{page}
Cleaning Tips

12^{page}
Troubleshooting

13^{page}
Product specification

Safety Precautions

For safety and proper use, please read every caution tips thoroughly before using the product.

This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Do not forcefully pull out or push in the power cord from/into the electrical outlet. Do not twist or bend the power cord. Do not place the power cord near heating device.

a. Not doing so may cause fire damage and possible electricution.

When squeezing screw is stuck and does not spin, please turn off the machine and put in reverse for 2-3 seconds.

a. Not doing so may cause overheating which can lead to motor failure.

Please do not disassemble or move the machine while operating.

a. Not doing so may cause product damage.

Please do not plug or unplug power cord with wet hands.

a. Can cause electricution.

Please do not put anything other than what is mentioned in the user's manual into product's openings.

a. Not doing so may cause physical damage, fire, or electricution.

Please do not use when power cord or plug is lose or damaged.

a. Not doing so may cause fire hazard or electricution.
b. Please consult to professional service technition.

Product is 7 kg, please use both hands when picking up the machine.

a. Not doing so may cause physical damage.

Connect the power cord to a dedicated grounded electrical outlet for 220 V~ 240 V.

a. Not doing so may cause fire damage and possible electricution.

Please do not clean product with running water, when the product is wet; stop operating and request service to your purchased store or to toll free customer service number.

a. Not doing so may cause product damage.

Please do not disassemble the machine while operating nor put anything into juice and pulp outlet while operating.

a. Not doing so may lead to product damage.

Please keep the product away from children's reach.

a. Mishandling or dropping the machine may cause product failure.

| Carry the product with both hands.

- Otherwise, physical damage may occur due to product's weight.

| Please do not operate the machine when Hopper is disassembled.

- Otherwise, the product damage may occur.

| Use the pusher, not fingers or utensils, to propel the food into the juicer.

| Do not use the product longer than 20 minutes, excessive use can cause overheating which can lead to motor failure.

| Please open all windows and doors for air ventilation when the product is exposed to gas.

| Operate the product on a flat and steady surface.

- Otherwise, the product malfunction or damage may occur.

| In case of any unusual odor, heat, or smoke, stop operating immediately and contact the nearest purchased store, retail centre or the service centre.

| Do not drop or give impact to product.

- Otherwise, the product damage or fire may occur.

| Please contact the customer service centre for technical difficulties. Do not customize or upgrade machine without professional supervision.

| Please plug in the power cord properly.

a. Not doing so may cause fire damage.

| Do not use the appliance if the squeezing screw is damaged.


| If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

| Do not attempt to repair or modify a defective power cord by yourself. Contact a service centre to replace the power cord by qualified electrician.

| Children should be supervised to ensure that they do not play with the appliance.


| Do not run the product run without fruit or vegetables inside drum. Otherwise, main parts may get damaged.

Product Components

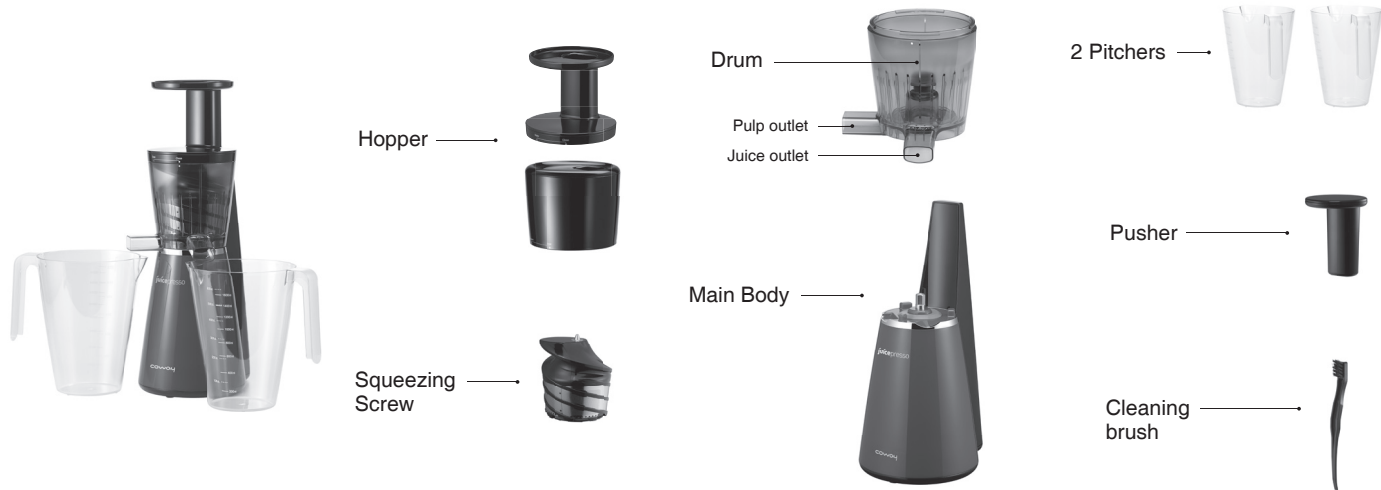



Preparations before use

 


Place and use the appliance on a dry, stable, level, and horizontal surface.

Connect the power cord.

Place container under each ejections (Juice/Pulp outlets).

Rubber pad installation

Place the rubber pad until it reaches the line inside.

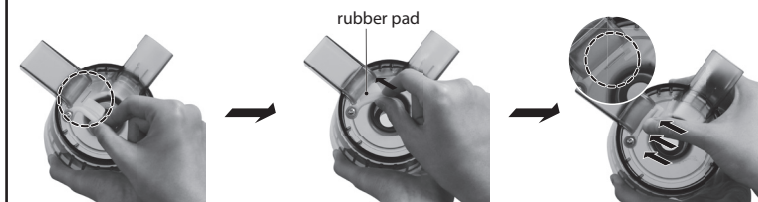

Ensure that the rubber pad underneath the drum is closed all the way each time before use.

Assembly instruction



1. Assemble the drum on the Main Body.

- ① Make sure the drum all the way into the shaft of the main body.

2. Place and push the squeezing screw into the centre of the drum.

3. Assemble the hopper onto the Drum.

- ① Make sure 'open dot' (O) on the hopper points to 'dot' (●) on the drum.
- ② Turn the hopper clockwise until it clicks into the drum.



Reverse the steps carefully when disassembling.

IMPORTANT



For proper operation, 'close dot' (●) on the hopper should be aligned with 'dot' (●) on the drum.

How to use **juice**presso



3 Operational buttons

- ▶ “ON” activates the motor and starts making juice.
- ▶ “REV” means reverse operation. Use this button when something is stuck. It will remove the clogged material.
- ▶ “OFF” stops the operation. Place the button at the centre to turn off the product.

Rinse every fruit or vegetables thoroughly before putting them into the machine.

After rinsing, put ingredients slowly into the machine. Use the pusher if necessary. Remove any hard seeds from ingredients before juicing.

We recommend not to juice fruits and vegetables over 1kg at once as the pulp may be blended into the juice.

Please ensure to turn off the machine after juicing.

Only touch the power button with dry hands.



Warning

Refrigerate the unused leftover juice.
Do not operate the product with wet hands.
Do not operate the product with empty drum.

Helpful Tips for your **juice**presso



Do not use the product longer than 20 minutes.

Otherwise, serious product damage may occur.



Remove any hard seeds from fruit or vegetables.

Otherwise, serious product damage especially on the screw may occur.



Do not use any utensils other than the pusher.


Otherwise, serious product damage may occur.



Do not insert too much ingredients./
Do not insert ingredients too fast.

Otherwise, juice may leak upwards.

When the machine is inoperable, follow the next steps.

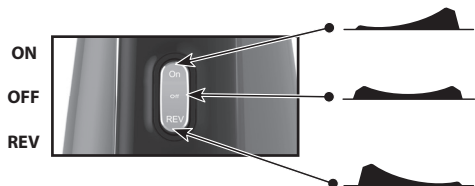


1. Turn off the machine.
2. Run the product in “REV” mode for a few seconds.
3. Operate the product again.
4. If “REV” mode is inoperable, turn off and disassemble the product.
Then, reassemble the product by instructions.
5. Activate the product again.




The power button should be completely dried before the product is operated.

How to disassemble and clean

1 Turn machine "OFF".

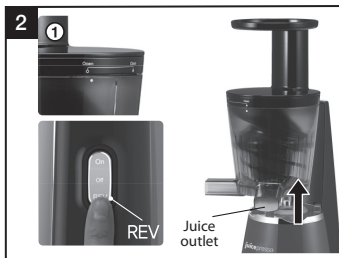

Grab and twist the hopper to unlock. Make sure 'open dot' (○) on the hopper is aligned with 'dot' (●) on the drum before pulling off the drum.

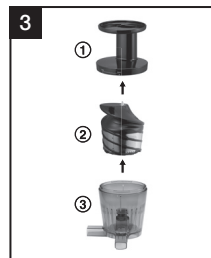

Disassembly order

- ① Hopper
- ② Squeezing Screw
- ③ Drum



Use the brush to clean the squeezing screw thoroughly after operating.



Warning

Use smooth and wet towel for cleaning.

Do not use dishwasher or high-temperature cleaner for cleaning.

5


Dry all the product parts after cleaning.



Warning

Do not dry the product parts with heating appliance.

Cleaning Tips

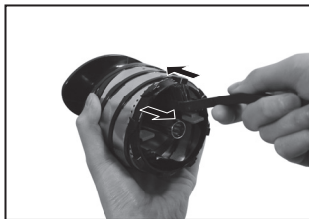


Clean the inside and outside of the squeezing screw with the brush provided.

- Clean and wash the product right after use.



Tip

Rinse the squeezing screw under running water after cleaning with the brush. The remaining pulp will be washed out.

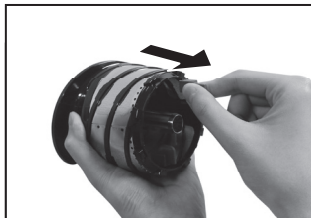

Pull out the rubber pad gently.



Push in the rubber pad gently in its place.

You can also clean the inside of the squeezing screw after detaching the rubber pad. Doing so will be more hygienic.



Tip

- Do not use detergents that contain organic solvents (solvent, thinner, etc), bleach, chlorine, benzene or abrasives.
- Do not keep the product without cleaning after use. Please remove pulp immediately or within 5 minutes after juicing.
- Do not rinse the main body under running water.

Troubleshooting

Users might improperly operate the product due to their unfamiliarity with how to use the product. Check the following items to resolve such issues. If issues cannot be resolved using these procedures, please contact the service centre.

Problem	Check	Possible Solutions	Problem	Check	Possible Solutions
The product is not working.	• Is the power cord connected?	Check whether the power cord is plugged into a 220 V to 240 V~, 50 Hz/60 Hz wall outlet.	The Drum cover is too hard to open.	• How did you open the Drum cover?	Press the REV button and open the Drum toward "OPEN". * Check directions when opening the drum.
	• Is the Juicepresso assembled correctly?	Assemble the product as described in this user's manual (refer to p. 7).	The product stops while in operation.	• Did you force food into the juicer?	Do not insert too much ingredients.
	• Has the power gone off?	Assemble the product as described in this user's manual (refer to p. 7).		• Did you put the ingredients with hard seeds?	Press the REV button for 2 to 3 seconds and then press the ON button again. * After following the step above, if the Squeezing Screw does not rotate, stop using the product. Turn off the product, disassemble and clean it. Then reassemble and use your Juicepresso again.
	• Have you operated the Juicepresso for over 20 minutes?	Turn off the product. Wait for a while and reactivate the product. If you want to use the product continuously, pause the operation for 1 hour.			
The juice is too thick or thin.	• Did you assemble the rubber pad correctly?	Assemble the rubber pad as described in this user's manual (refer to p. 6 'Rubber pad installation').	The motor is running with loud noise and shaking.	• Did you check that all parts are assembled properly and in correct position?	If the product is assembled properly, it is normal to make noise in juicing from overripe fruit and vegetables. Turn the product off and clean the receptacle.
	• Did you use fresh ingredients?	Overripe fruits or vegetables may clog in the motor. If you want to use the overripe ingredients, use them after soaking in mineral water for 10 minutes or more.	The receptacle is vibrating in use.	• This is normal to make juice. If the product overheats, contact the local service centre.	
	• Did you put too many ingredients or anything else into the machine?	Do not put too many ingredients or any liquids into the machine. We recommend you to clean the machine after 1 kg of juicing. Disassemble the Drum and wash it.			

Product specification



Specification

Product Name		Juicepresso
Model Name		CJP-03
Voltage		220 V - 240 V~
Frequency		50 Hz
Power Consumption		150 W
RPM		32 Rpm (at 20N.M)
Electrical cord length		1198 mm
Motor		DC Motor
Weight		7 kg
Dimensions	Width	150 mm
	Length	193 mm
	Height	432 mm
Standard usage time		Less than 20 minutes continuously

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

- Read all instructions.
- To protect against risk of electrical shock, do not put the motor base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug the product from electrical outlet when not in use, before putting on or taking off parts and before cleaning.
- Avoid contact with moving parts.
- DO NOT operate any appliances with a damaged power cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner.
- Return appliance to the nearest authorized service facility for examination, repair or electrical adjustment.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- DO NOT let cord hang over edge of table counter, or touch hot surfaces.
- DO NOT put your fingers or other objects into the juicer opening while it is in operation. If ingredient becomes lodged in the opening, use the pusher or other piece of fruit to push it down. If the ingredient is still stuck, turn the motor off and disassemble juicer to remove the remaining ingredient.
- Do not use the product outdoors.
- Do not place the product on or near heating device.
- Do not use the product other than intended use.
- Turn off the switch after use.
- Use the product when you are familiar with all instructions and operating procedures.
- Do not unplug the product by pulling the power cord. Grab the plug to unplug.
- Turn off all the switches before connecting the power cord.

WARNING: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.
Do not attempt to modify the plug in any way.

SAVE THESE INSTRUCTIONS.

coway

juicepresso
CJP-03

More information : <http://www.juicepresso.com>